

Universal USB 3.0 Docking Station

User's Manual

© 2012. All Rights Reserved.

Universal USB 3.0 Docking Station User's Manual
Original Issue: 07/2012

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Before starting...	1
Safety information	1
Introduction	2
Features	2
Package contents	2
System requirements	2
Product overview	3
Front view	3
Rear view	4
Connections	5
Installing the driver	6
Installing the driver under Windows 7 or Windows Vista	6
Installing the driver under Windows XP	8
Verifying the driver install	8
Configuring your displays	9
Menu options and settings	10
Multi-monitor configuration	11
Supported resolutions	12
Uninstalling the driver	13
Regulatory compliance	13
Specifications	14
Frequently asked questions	15

Contents

Before starting...

Before connecting or using this product, please read through this User's Manual.



.....

Note: The illustrations in this guide are only for reference. Your product may differ.

Safety information

- Keep this User's Manual for future reference
- Store the product in a warm, dry environment
- Refer to an authorized technician if the product:
 - Has been exposed to moisture.
 - Has been dropped or damaged in any way.
 - Shows obvious signs of breakage.
 - Is not working well and you can't fix it by following the advice in the User's Manual.

Introduction

This docking station enables you to expand your notebook's connectivity.

It allows you to add extra USB peripherals, connect to a LAN, speakers and a microphone while occupying only one USB port on your computer. The docking station supports the USB 3.0 specification.

The docking station also supports video output through a DVI or HDMI (optional) connection. The extra display device can be configured to mirror your primary screen or extend the Windows desktop.

The docking station is ergonomically designed with most peripherals plugged in from the rear, and two USB ports and the audio jacks on the front. It also features an industry-standard security lock.

Features

- USB 2 and USB 3.0 compliance.
- External display resolution up to 2048 x 1152 resolution.
- Stereo audio output.
- Gigabit Ethernet connectivity.
- HDMI® 1.3 compliant.

Package contents


- Docking station
- USB 3.0 cable
- Power adapter
- CD containing the User's Manual and drivers
- Quick Guide
- DVI-to-VGA adapter (only for selected models)

System requirements

- PC with dual-core CPU at 2.0 GHz or higher.
- 1 GB of RAM
- USB 3.0 port
- 30 MB of available disk space
- Microsoft® Windows® XP 32-bit, Windows Vista® or Windows® 7 (32- or 64-bit)


Product overview

Front view

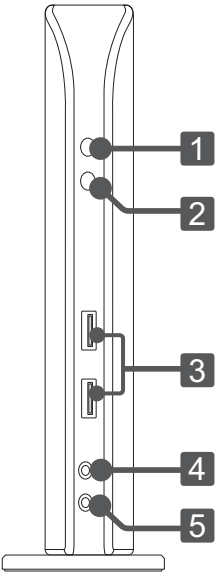

#	Item	Description
1	Power indicator	Lights when the power is on.
2	USB indicator	Lights when a USB device is plugged in.
3	USB 3.0 ports	Connect to USB devices
4	Speaker jack	Connects to speakers or earphones.
5	Microphone jack	Connects to a microphone.


Rear view

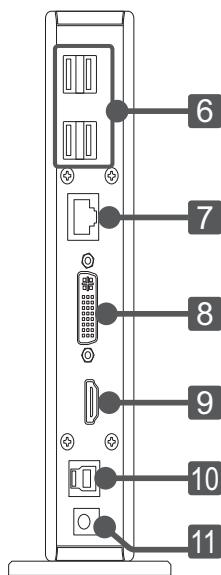

#	Item	Description
6	USB 2.0 ports	Connect to USB devices.
7	LAN (RJ-45) port	Connects to a LAN.
8	DVI connector	Connects to a DVI display or projector.
9	HDMI connector (optional)	Connects to an HDMI display or projector.
10	Type B USB 3.0 port	Connects your docking station to your computer.
11	Power jack	Connects to the power adapter. The mini docking station always needs external power to operate, it is not USB-powered.

Connections

The illustrations below show how various peripherals may be connected to your docking station.

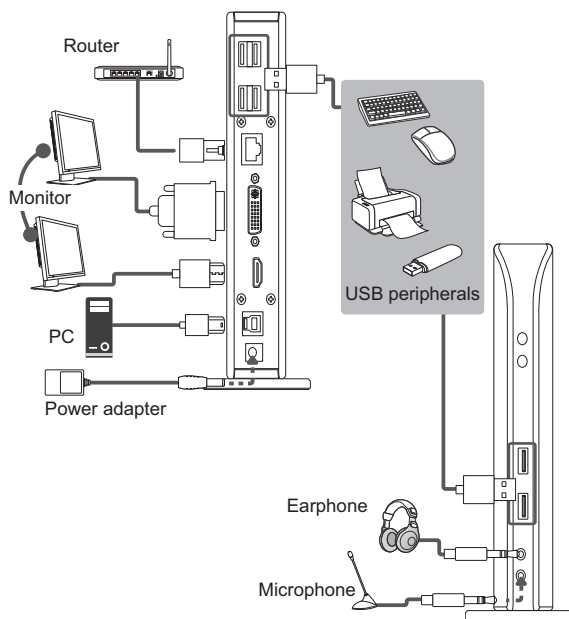

Installing the driver




Important: Make sure you have installed the appropriate driver from the supplied CD before connecting the docking station to your PC.



Note: The screen captures below are for reference only and may differ from the dialog boxes you see.

Installing the driver under Windows 7 or Windows Vista


- 1 Insert the supplied CD into your computer's optical disc drive.
- 2 Click **Run Setup.exe** to start the installation.

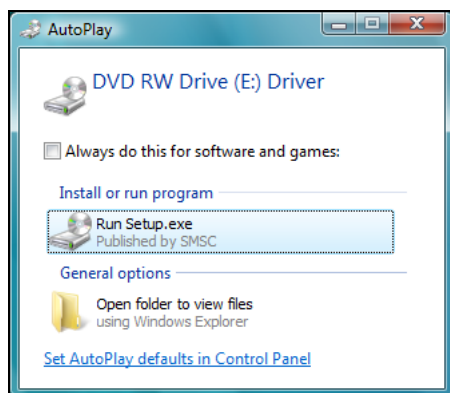


Note: If autorun is disabled on your computer, use the file browser to open your optical drive and double-click **Setup.exe** to start the installation.

- 3 Enter the administrator password and click **Yes** if the *User Account Control* dialog box appears.

 - 4 Read through the EULA and click **I Accept** to continue installing.

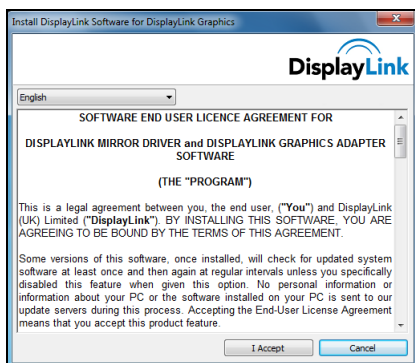

- 5 The installation will proceed and may take a few minutes. During the installation, your screen may flash or temporarily go black.
- 6 Plug your docking station into your computer once the driver is installed. Your system will display a message in the icon tray informing you that the docking station is ready to be used.

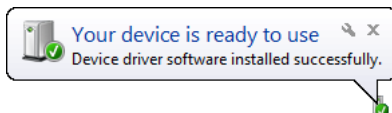


If there is a yellow icon next to any item, the driver has not been installed correctly: In which case, you should remove the driver, unplug the docking station and reinstall the driver.

Configuring your displays

The supplied utility allows you to configure the display, screen rotation, resolution and physical arrangement.

- 1 Click the utility icon in the icon tray.
- 2 Select the item you wish to change from the menu that appears.

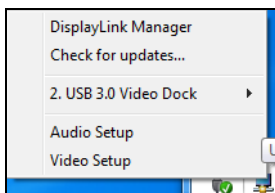

Menu options and settings


Option	Description
DisplayLink Manager	Open Windows screen resolution settings.
Check for updates	Check to see if a new driver is available.
USB 3.0 Video Dock/Dual Head Video Dock	
Screen resolution	Select an available resolution. Note: <i>This function is unavailable in mirror mode, as the resolution is defined as the resolution of the primary monitor.</i>
Screen rotation	Set the screen rotation as needed.
Extend to	Extend the screen to the desired display.
Set as Main Monitor	Set the selected display as the main monitor.
Notebook Monitor Off	Set the external display as the main display and turn off the notebook's screen. Note: <i>This function works only when an external display is connected, and will only appear when the utility is installed on a notebook computer.</i>
Mirror	Set the external display to duplicate the main display.
Off	Turn the external display off.
Optimize for Video	Optimize display for video playback. Note: <i>Text may be slightly blurred when this option is enabled.</i>
Fit to TV	Adjust the size of Windows desktop on the external display. Note: <i>This function works only when an external monitor is connected, and in extended mode. If this option is selected while in Mirror mode, the external monitor will change to Extended mode.</i>
Audio Setup	Open the Windows audio settings page. Note: <i>This function only works on some computers.</i>


Option	Description
Video Setup	Open Windows screen resolution settings.

Multi-monitor configuration

You can connect an additional monitor to your computer through the DVI port and/or HDMI port (if available), in addition to an external monitor connected to your computer's VGA port.

 The external monitor can be configured as the main display, to mirror the main display or for an extended Windows desktop. To configure the displays, right-click on the Windows desktop and select **Screen resolution** (Windows 7), **Personalize > Display Settings** (Windows Vista), or **Properties > Settings** (Windows XP) and adjust the settings as required.

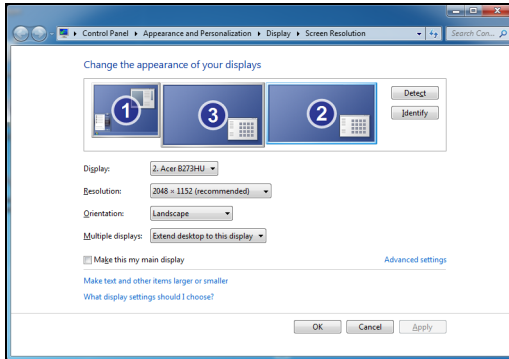

Alternatively, if your computer is running Windows 7, you can press the Windows key <  > and <P> to configure the displays.

Supported resolutions

Resolution		Refresh rate: 16-bit color depth (MHz)	Refresh rate: 32-bit color depth (MHz)
640 x 480	VGA	60 / 72 / 75 / 85	60 / 72 / 75 / 85
800 x 600	SVGA	56 / 60 / 72 / 75 / 85	56 / 60 / 72 / 75 / 85
1024 x 768	XGA	60 / 72 / 75 / 85	60 / 72 / 75 / 85
1280 x 720	720p	60	60
1280 x 768	WXGA+	60 / 75 / 85	60 / 75 / 85
1280 x 800	WXGA	60	60
1280 x 1024	SXGA	60 / 75 / 85	60 / 75
1366 x 768	WXGA+	60	60
1400 x 1050	SXGA+	60 / 75 / 85	60 / 75 / 85
1600 x 1200	UXGA	60	60
1680 x 1050	WSXGA+	60	60
1920 x 1080	1080p	60	60
1920 x 1200	WUXGA	60	60
2048 x 1152	QXGA	60	60



Important: Interlaced and reduced blanking modes are not supported.

Uninstalling the driver

If you need to uninstall the driver, go to the **Control Panel > Programs > Programs and Features** and select **DisplayLink Graphics**. Click on **Uninstall or change the program**.

Confirm that you wish to delete the driver.

You may be asked to reboot your computer to complete the uninstall.

Regulatory compliance

FCC conditions

This equipment has been tested and found to comply with Part 15 Class B of the FCC Rules. Operation is subject to the following two conditions:


- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received and include interference that may cause undesired operation.

CE

This equipment is in compliance with the requirements of the following regulations: **EN 55 022: CLASS B**

WEEE

For users in the European Union: According to the WEEE (Waste electrical and electronic equipment) Directive, do not dispose of this product as household waste or commercial waste. Waste electrical and electronic equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

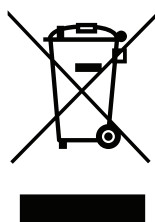

Specifications

Host interface		USB 2.0/3.0
Connectors	Video out	HDMI (optional)
		DVI HDDE
	Host upstream link	Type B USB
	Hub downstream link	Type A USB
	Audio	3.5 mm stereo jack
	Network	RJ-45 (Gigabit Ethernet)
	Power	DC-in
Video	Maximum resolution	2048 x 1152 (HDMI and DVI)
	Color depth	16- and 32-bit
Audio		Stereo (2.1 channels)
Power	Mode	Self-powered
	Adapter	Input: AC 100 - 240 V
		Output: DC 5 V, 5 A
	Consumption	Operating: 14.43 W
		Standby: 1.95 W
Dimensions		195 x 77 x 38 mm (without stand)
Weight		365 g
Environment	Operating temp	10 - 40 degrees C
	Storage temp	-10 to 80 degrees C
Compliance		CE, FCC

Frequently asked questions

How do I get the drivers I need?

Go to **www.acer.com** and select your country/region. Click **Support > Drivers & Downloads > Notebook > Travelmate** and then your computer model. Select the operating system from the drop-down menu and click the **Drivers** tab.

Download and open the *USB docking station* driver file.

Once the file you've downloaded is open, extract the folder to your computer and double-click **autorun.exe** to start the installation process.

My connected devices are not functioning.

This could be caused by the following:

- The docking station power adapter is not plugged in properly. Please make sure the power adapter is plugged in properly to the power outlet and the docking station.
- The drivers are not correctly installed. To resolve this issue, please make sure you have the correct device drivers and that the docking station driver is correctly installed.
- A power surge may have disabled the connected port. To recover the port functionality, turn off the docking station then reconnect the power after a few minutes.

My external display does not work after I plugged in the docking station.

This could be caused by following:

- The docking station power adapter is not plugged in properly. Please make sure the power adapter is plugged in properly to the power outlet and the docking station.
- The display cable (VGA/DVI/HDMI) is not correctly connected. Ensure the cable is correctly connected.
- The display settings may be incorrect. Make sure the display mode is set to Extended.
- The drivers are not correctly installed. Please install the driver from the Driver CD and reboot your system before reconnecting your external display.

The LAN port (RJ-45) on the docking station does not work after I plugged in the docking station.

This could be caused by following:

- The docking station power adapter is not plugged in properly. Please make sure the power adapter is plugged in properly to the power outlet and the docking station.
- The LAN cable is not correctly connected. Please ensure the LAN (RJ-45) cable is plugged in properly.
- The drivers are not correctly installed. Please install the driver from the Driver CD and reboot your system before reconnecting your LAN cable.

What graphics interface that USB docking station support?

The provided docking station driver includes a software-based graphics driver. Not all hardware acceleration methods are available to applications. The table below provides more support information.

Interface	Windows XP	Windows Vista / Windows 7*
DirectX 10	No	Yes, if supported by the primary graphics card.
DirectX 9	No	Yes, but full screen mode is not available. It displays only in window mode.
DirectX VA	No	Yes, if supported by the primary graphics card.
Direct 3D	No	Yes, but not available when the docking station is set as the primary display.
DirectDraw	Yes	Yes
OpenGL	No	Yes, but full screen mode is not available. It displays only in window mode.
GDI+	No	Yes, but full screen mode is not available. It displays only in window mode.

* With Windows Aero enabled.

The screen is blank when playing protected content.

Many factors may cause this issue, such as:

- Playing back protected contents over a USB connection.
- You may need to download additional CODECs for your viewing program.
- Your system may not have the encode/decode capabilities. Please check with the vendor to confirm the support and capabilities.

I encounter slow performance and the image lags or freezes when playing videos on external displays.

- The CPU may be overloaded. Reduce the screen resolution or close unnecessary programs.
- Ensure you have not set the display resolution too high. For details of the supported display resolutions, please refer to **"Supported resolutions" on page 12**.